

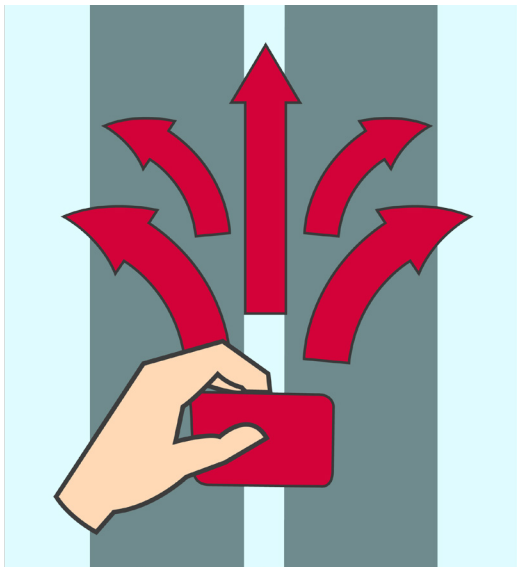


7. Thanks to the water you can now carefully place your sticky part sticker on the bodywork. We advise you to take benchmarks to center your adhesive. (see red markers illustration)

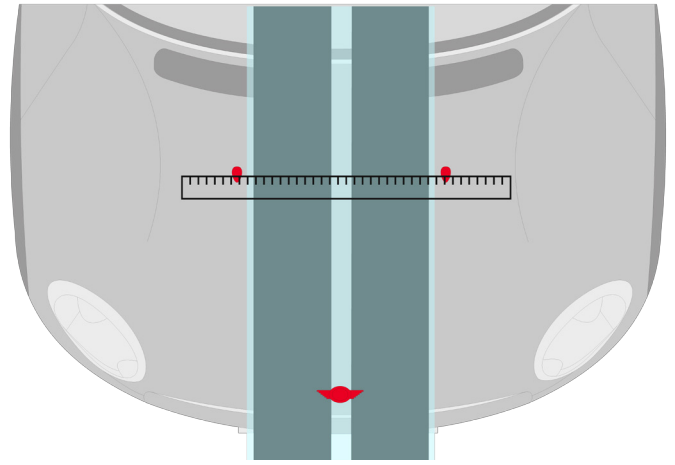

8. Starting from the center and outwards, remove water and bubbles with your squeegee. Do it several times if necessary. If the adhesive has moved during this step, take it off and return to step 4.
9. Once all the water has been removed. Wait 24 hours that everything dry and for the adhesive to adhere to the bodywork. The more water is expelled, the faster the support will be dry.

10. For strips, cut the adhesive with a cutter on each side following the shape of the bonnet.

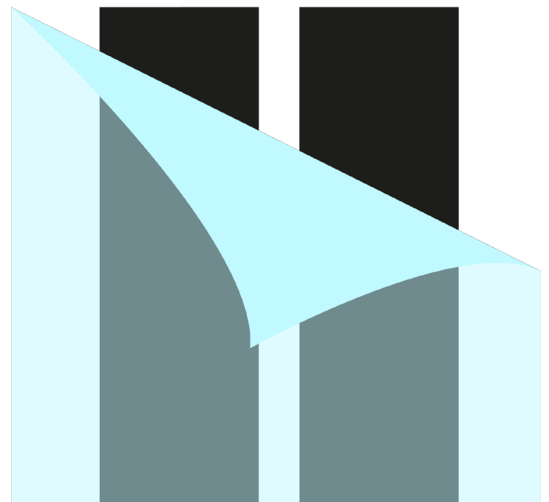

11. After 24 hours, gently remove the transfer film and clean the whole. If there are a few bubbles left, blow the air out with the squeegee or pierce with a needle.

**MBV**  
Ma Belle Voiture



[www.ma-belle-voiture.com](http://www.ma-belle-voiture.com)