

Equipment

Masking tape



Cutter



Vinyl Squeegee




Water spray



Instructions

1. Remove any items that could interfere with installation such as jets and wipers.
2. Clean the surface with cleaning product (household vinegar, alcohol, etc.) to degrease your bodywork.
3. Prepare a water + washing-up liquid solution (1 drop for 20cl of water) in a spray.
4. Remove the Liner from your adhesive (see illustration below). You will then discover the sticky part of the adhesive.

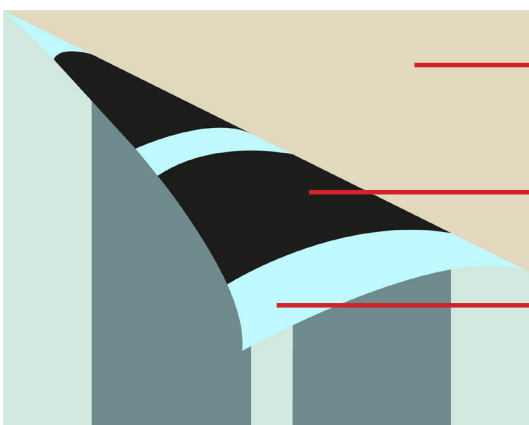



The Liner : opaque film to be removed first

The adhesive : this side is the sticky part

The transfer film : transparent film to be removed last

5. Spray the sticky part of your stickers with the water + washing-up liquid solution.
6. Likewise spray your bonnet.

7. Thanks to the water you can now carefully place your sticky part sticker on the bodywork. We advise you to take benchmarks to center your adhesive. (see red markers illustration)

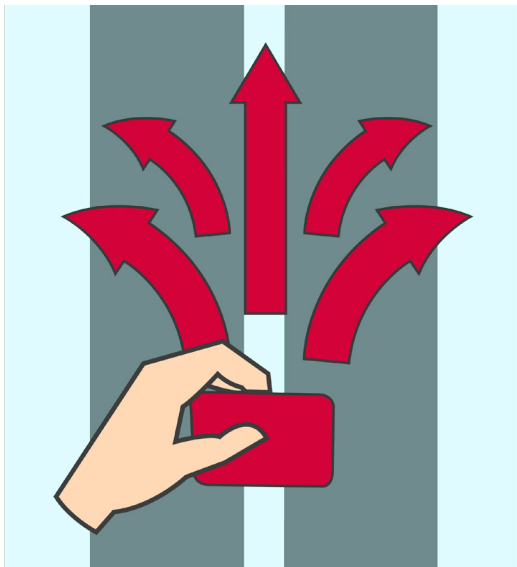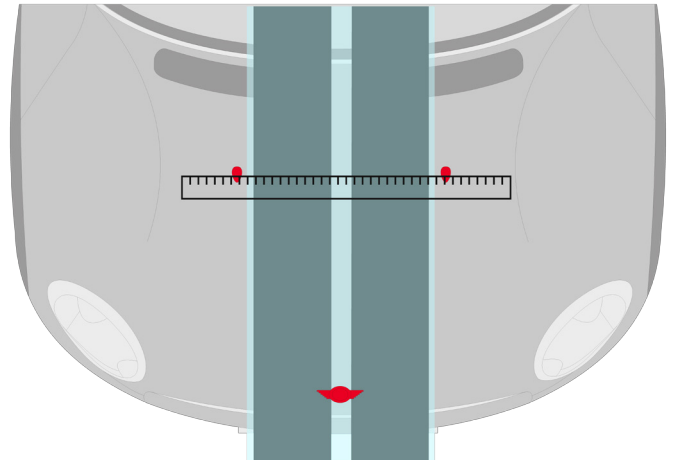

8. Starting from the center and outwards, remove water and bubbles with your squeegee. Do it several times if necessary. If the adhesive has moved during this step, take it off and return to step 4.

9. Once all the water has been removed. Wait 24 hours that everything dry and for the adhesive to adhere to the bodywork. The more water is expelled, the faster the support will be dry.

10. For strips, cut the adhesive with a cutter on each side following the shape of the bonnet.



11. After 24 hours, gently remove the transfer film and clean the whole. If there are a few bubbles left, blow the air out with the squeegee or pierce with a needle.

MBV
Ma Belle Voiture



www.ma-belle-voiture.com